OPERATING MANUAL

Programmable Dual Output DC Isolator



Operating Instructions

Read first and then	2
2. Scope of supply	3
3. Variants	3
4. Brief description	4
5. Overview of the parts	4
6. Configuration	
7. Technical data	6
8. Mounting	
9. Electrical connections	
10.Commissioning	13
11.Maintenance	
12.Dimensional drawings	13

1. Read first and then



The proper and safe operation of the device assumes that the Operating Instructions are *read* and the *safety* warnings given in the various sections are observed.



The device should only be handled by appropriately trained personnel who are familiar within and authorised to work in electrical installations.

2. Scope of Supply



20000000 (1) -

- (1) Signal Isolator(2) Operating Instructions

3. Variants

	Auxiliary supply voltage
I	60300V AC/DC
I	2040V AC / 2060V DC

4. Brief description

The purpose of the device is to electrically isolate input, outputs and power supply . The isolator fulfills all requirements and regulation concerning electromagnetic compatibility EMC and safety (IEC61326-1 and IEC 61010-1:2010). The device has one input and provides two independent outputs in an extremely small space.

Overview of the parts

Fig. 1 shows those parts of the device which are used for mounting, electrical connections and other operations described in the Operating instructions.



Fia. 1

- (1) Auxillary supply
- (2) Output-1 Terminals
- (3) Output-2 Terminals
- (4) Input common Terminal
- (5) Current input Terminals
- (6) Voltage input Terminals(7) Output-1 slide Switches
- (8) Output-1 Potentiometers
- (9) Output-2 slide Switches(10) Output-2 Potentiometers
- (11) Input slide Switches
- (12) Power ON LED
- (13) Front Sticker

6. Configuration

The device inputs and outputs can be configured using slide switches. Table A and B contains the switch position information for the configuration of input and output-1/output-2 respectively. When ever configuration is changed output-1 and output-2 fine adjustment must be accomplished using "Z" (Zero) and "S" (Span) potentiometers provided on front panel separately for both the outputs i.e. output-1 and output-2

Refer Fig.1 Front panel view of device

TARI F A: INPUT RANGE SELECTION

TABLE A: INPUT KANGE SELECTION				
Input	S1	S2	S3	S4
020mA	OFF	OFF	OFF	OFF
010mA	OFF	OFF	OFF	ON
024mA	OFF	OFF	ON	OFF
420mA	OFF	OFF	ON	ON
010V	OFF	ON	OFF	OFF
012V	OFF	ON	OFF	ON
05V	OFF	ON	ON	OFF
15V	OFF	ON	ON	ON

TABLE B: O/P1 & O/P2 RANGE SELECTION

Output	S1 & S2	S3	S4
010mA	OFF	OFF	OFF
020mA	OFF	OFF	ON
210mA	OFF	ON	OFF
420mA	OFF	ON	ON
05V	ON	OFF	OFF
010V	ON	OFF	ON
15V	ON	ON	OFF
210V	ON	ON	ON

7. Technical Data

Measuring Input +

DC Current ·

Standard ranges: 1) 0 - 20 mA

2) 0 - 10 mA

 $R < 15.5\Omega$ 3) 4 - 20 mA

4) 0 - 24 mA DC Voltage:

Standard ranges: $1) 0 - 12 V \ R \ge 100 K\Omega$

3) 0 - 5 V 4) 1 - 5 V } R≥ 60KΩ

Measuring outputs 1 & 2 →

DC current:

1) 2...10mA 2) 4...20mA

3) 0...10mA 4) 0...20mA

Burden voltage 15V

External Resistance Rext max. [Ω] = 15V/ IAN [mA] I AN =Output circuit full scale

value 1) 0...5V

DC voltage:

2) 1...5V 3) 0...10V

4) 2...10V Burden Rext min. $[k \Omega] = UAN [V]/5 mA$

UAN =Output circuit full scale value

Residual ripple in Output: < 0.4% p.p. Response time: < 50 ms

Current limiter at R... =0 : < 42 mA for voltage output

Voltage limiter at $R_{ext} = \infty$: < 20V for Current output

Power supply H →○

Rated operating Voltage: 60 to 300 V AC/DC

20 to 40 VAC / 20 to 60 VDC

Rated operating frequency: 45 ... 50-60 ... 65 Hz

Power input : ≤ 5 VA

Accuracy data (acc. to IEC 60688)

Basic accuracy : Limit error ≤ ± 0.2%

Including linearity and reproducibility errors

Reference conditions

Ambient temperature 23°C ± 2°C

Output burden 23°C ± 2°C

Current: 0.5*R_{ext} max.

Voltage: 2*R_{ext} min.

Influencing Factors:

Temperature $< \pm 0.1\%$ per 10° C

Burden influence < ± 0.1% Longtime drift < + 0.3%/ 12 months

Switch- on drift $\leq \pm 0.2\%$

Installation Data:

Mounting position Rail mounting

Weight Approx. 0.25 kg

Connection Terminal:

Connection Conventional Screw type terminal

Flamont with indirect wire pressure

Permissible cross section < 4.0 mm² single wire or 2 x 2.5 mm² of the connection lead fine wire

Permissible

2 g acc. to EN 60 068-2-6 Shocks: 3 x 50 a

2 shocks each in 6 directions Acc. to FN 60 068-2-27

All circuits (measuring inputs/ Flectrical:

insulation measuring

outputs/power supply) are electrically insulated

Regulation

Vihrations:

Electromagnetic Acc. to IEC 61326-1 Compatibility: For Housing : IP 40 Protection : For Terminals : IP 20

Pollution degree:

Acc. to IEC 61010-1 resp. Flectrical standards: FN 61010-1

Test voltage: -All 3.7 kV. 50 Hz 1 min

> (Leakage current 5mA) Measuring inputs versus: -Measuring outputs 2.3 kV, 50 Hz 1min & O/P1 to O/P 2:

500 V ,50 Hz ,1 min -All circuits versus case: 3.7kV, 50 Hz ,1min

Environmental conditions

Climatic rating : Climate class 3 acc. to VDI/VDF 3540

VDI/VDL 3340

Nominal Range of Use $0 \, ^{\circ}\text{C}$ to 45 $^{\circ}\text{C}$ (Usage group II) Operating temperature $-10...23...55 \, ^{\circ}\text{C}$

Storage temperature -40...70°C

Annual mean <75%

Relative humidity

8. Mounting

The Isolator can be mounted on a top-hat rail.

Make sure that the ambient temperature stays within the permissible limits :

_ -10 and 55°C



Fig. 2 Top-hat rail Mounting

As the front of the enclosure conforms to IP 40. The terminals of the product should be protected from liquids. Transducer should be mounted in a reasonably stable ambient temperature and where the operating temperature is within the range - 10 to 55°C. Vibration should be kept to a minimum and the product should not be mounted where it will be subjected to excessive direct sunlight.

Caution

- In the interest of safety and functionality this product must be installed by qualified engineer, abiding by any local regulations.
- Voltages dangerous to human life are present at some of the terminal connections of this unit. Ensure that all supplies are de-energised before attempting any connection or disconnection.
- This product do not have internal fuses therefore external fuses must be used to ensure safety under fault conditions

Flectrical Connections

Input connections are made directly to screw-type terminals with indirect wire pressure. Choice of cable should meet local regulations. Terminal for Current inputs will accept up to $\leq 4.0 \text{ mm}^2$ single wire or $2 \times 2.5 \text{ mm}^2$ fine wire.



Make sure that the cables are not live when making the connections!

The 230 V power supply is potentially dangerous!



...the data required to perform the electrical insulation task agree with the data on the nameplate of the Isolator (⊕ input E⊖+ output A1 & A2 and →○ power supply H!)

...the total loop resistance connected to the output (receiver plus leads) does not exceed the maximum permissible value R_u max. See "Measuring Output" in sec. 7. Technical data" for the maximum values of R...!

...the input and output cables should be twisted pairs and run as far as possible away from heavy current cables!

In all other respects, observe all local regulations when selecting the type of electrical cable and installing them !

Connection	Terminal details	
Measuring Current input	+	-
A)024mA	11	10
B)420mA	12	10
C)020mA	13	10
D)010mA	14	10
Measuring Voltage input		
A)15V	15	10
B)05V	16	10
C)012V	17	10
D)010V	18	10
Measuring output 1	5	6
Measuring output 2	8	9
Auxiliary supply	1	2

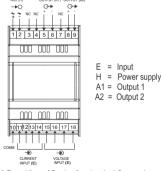


Fig.3 Front View of Device for electrical Connections

10. Commissioning

Switch on the measuring inputs and the power supply. The green LED lights continuously after switching on.

The power supply unit must be capable of supplying a brief current surge when switching on. The instruments presents a low impedance at the instant of switching ON which requires a current l_{start} of ≥35 mA

11. Maintenance

No maintenance is required.

12. Dimensional Drawings

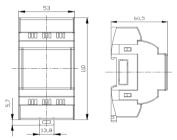


Fig.4 Side view and Front view

	Mataa	
	Notes	

Notes
I

Notes
I