

# **Data Sheet**

# **RI 301 ATS**











RI 301 AT5 is a Auto Tranfer Switch (ATS) Genset controller aimed at giving high performance and benefits. The graphic display is a user-friendly human interface useful for an immediate visualization of measures and alarms coming from the genset.

# **Product Features:**

- RS232 Rs485 independent serial interfaces
- Digital / Analog inputs and outputs programmable from the keyboard
- Help service page, with visualization of the status of inputs and outputs
- Fevents log with upto 250 events
- Voltages and Currents on the same display page
- Remote start with closure of the generator contactor even with mains present
- Timer Start / Stop for programmed work cycles
- Smart auto setup systems
- Easy programming and navigation
- Fast and easy updating of the maintenance hours

# Dimension Details: 245 mm 182 mm 40 mm



# Operation Modes:

# Automatic Mode

- ✓ Push the AUT button to select this functioning mode.
- ✓In case of mains failure the remote start output (J5.4) is activated and de-activated in the presence of the same. This is the standard logic. Its also possible to activate the remote start output in special conditions.

# Manual Mode

- ✓ The engine can be started and stopped manually by pressing start and stop key buttons; load switching on mains and generator is managed using buttons KG and KR.
- ✓ Press the MAN button to select this functioning mode.

# Test Mode

# Manual test:

- ✓ Press the TEST button: the engine starts immediately to test the genset for a\_programmable time.
- ✓ Disabling the test (or after the test time), the controller returns to the previous operation mode.
- ✓ Push the TEST button to select this functioning mode.

# Automatic test:

✓ If you programmed an automatic test, it will run only if you are in automatic mode.


# Reset Mode

- ✓ If you select Reset mode, the alarms are reset and the engine stops immediately if it is working. If the cause of the alarm remains, it is not possible reset the alarm.
- ✓ Push the RESET button to select this functioning mode.

### **Alarms**

- ✓ In case of alarm, the display shows its description. For each alarm it is available a message that can help to identify the source of the problem.
- ✓The alarm reset can be made by pressing the RESET button; by this, the alarm is deleted and the genset goes in Reset mode, preventing accidental generator starting attempts.
- ✓ If the alarm, after reset, still remains on the display, the cause of the alarm is not removed.



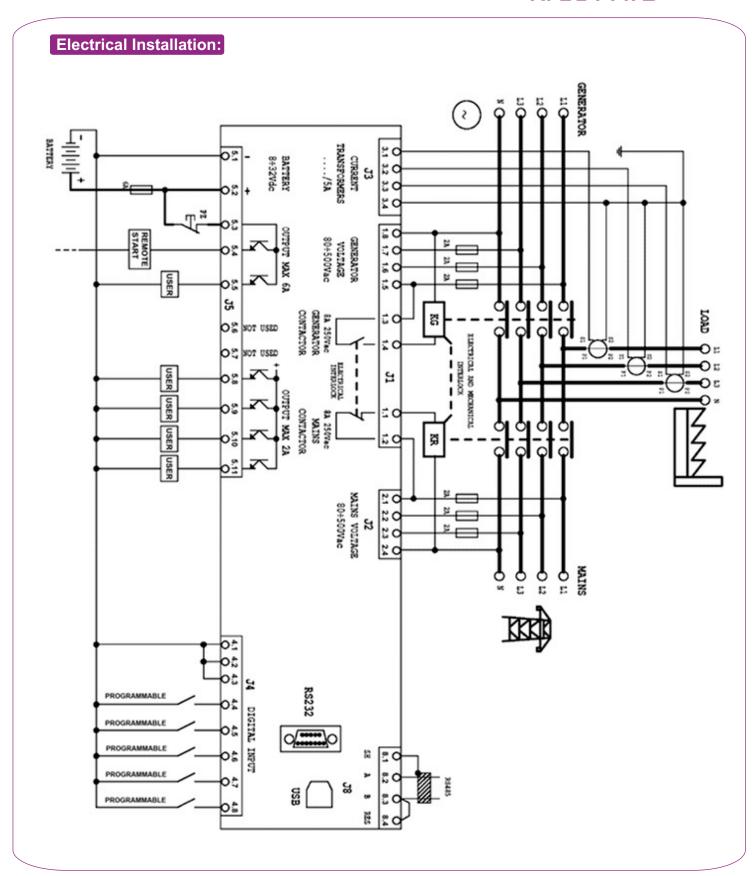










# **Connections:**

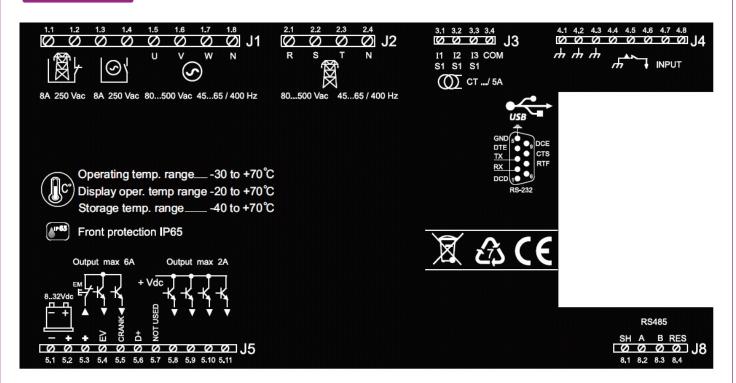

# J1 – Genset AC voltage and contactors

- 1.1 Mains contactor output (NC)
- 1.2 Mains contactor output (NC)
- 1.3 Genset contactor output (NO)
- 1.4 Genset contactor output (NO)
- 1.5 Genset voltage phase 1
- 1.6 Genset voltage phase 2
- 1.7 Genset voltage phase 3
- 1.8 Neutral

## J4 – Digital inputs

- 4.1 Gnd
- 4.2 Gnd
- 4.3 Gnd
- 4.4 Programmable digital input (Low coolant level)
- 4.5 Programmable digital input (Ground protection alarm)
- 4.6 Programmable digital input (Remote start)
- 4.7 Programmable digital input (Remote stop)
- 4.8 Programmable digital input (Load contactor open)

### J2 - Mains AC voltage

- 2.1 Mains voltage phase 1
- 2.2 Mains voltage phase 2
- 2.3 Mains voltage phase 3
- 2.4 Neutral

# J5 - Supply and Outputs

- 5.1 Battery negative
- 5.2 Battery positive
- 5.3 Common positive for fuel valve and start output (Emergency stop alarm input)
- 5.4 Fuel valve output
- 5.5 Start engine output
- 5.6 Battery charger alternator output (D+)
- 5.7 Not used
- 5.8 Programmable output (Global alarm #1)
- 5.9 Programmable output (Glow plugs)
- 5.10 Programmable output (Siren)
- 5.11 Programmable output (Electro solenoid)

# J3 – Genset AC current

- 3.1 Genset current I1
- 3.2 Genset current I2
- 3.3 Genset current I3
- 3.4 CT common

# J8 - RS485 port

- 1- Shield
- 2- A
- 3- B
- 4- Termination resistor

### Rs232 - Communication ports

RS232 - connection of a remote device









# **Data Sheet**

# RI 301 ATS

# Hardware Ratings:

General Characteristics Rated Voltage (Vdc) 12 Vdc (24 Vdc) Allowed (Vdc) 6 Vdc to 33 Vdc Rated Voltage (Vac) 400 Vac Allowed (Vac) Upto 500 Vac Allowed Frequency From 45 to 75 Hz

Max Consumption with Backlit 250 mA

Temperature Range -30 to +70°C (electric) -20 to +70°C (display)

-40 to +70°C (storage)

Front Protection **IP65** 

Display 128 x 64 pixel, 66 x 33 mm

**Digital Inputs** 

No

Static Output 6 (2 x 4A; 4 x 2A)

Serial Communication Interface

Interface Type Serial RS-232 Cable Length < 3m

**Baud Rate** 115200 bps Interface Type RS485 Baud Rate 115200 bps

Contactors Relays No of Outputs

Type of Contacts 1 NO (Genset Contactor), 1 NC (Mains Contactor)

Contacts Capacity 8A / 250 Vac

Load Currents Input

No Measure Range Upto 5A

< 1% FS + 1 digit Precision

Voltage Inputs

No

Input Type **Resistive Coupling** Rated Voltage 230 Vac L-N, 400 Vac L-L

TRMS from 0-300 Vac L-N, 0-500 Vac L-L Measure Range

< 1% FS + 1 digit\_\_\_\_\_ Precision

**Active Power Measure** 

Measure Type Instant Power Integration

Hardware

No of Kevs 13 No of LEDs 10









www.rishabh.co.in Version No.: C 11/17 Page No.: 5

# Standards:

- 1. EN55011
- 2. EN55016-2-1
- 3. EN55016-2-3
- 4. EN60068-2-1
- 5. EN60068-2-2
- 6. EN60068-2-27
- 7. EN60068-2-30
- 8. EN60068-2-6
- O. E1100000 2 0
- 9. EN61000-4-2
- 10. EN61000-4-3
- 11. EN61000-4-4
- 12. EN61000-4-5
- 13. EN61000-4-6
- 14. EN61000-4-8
- 15. EN61000-6-2
- 16. EN61000-6-4
- 17. HBV Bureau Veritas NR320

# Ordering Information:

Ordering information	Ordering Code
RISH Genset Controller RI301 Auto Transfer Switch	RI 301 ATS









Page No.: 6 www.rishabh.co.in Version No.: C 11/17





# RISHABH INSTRUMENTS PVT. LTD.