

# **Data Sheet RISH CON-Hz** Frequency transducer





Analyze













Control



















## Data Sheet RISH CON-Hz

### Application

The RISH CON - Hz transducer is used for frequency measurement. The output signal is proportional to measured frequency and is either load independent DC Current or load independent DC Voltage.

### **Salient Features**

- Fully onsite programmable input range
- Available in Single or Dual output type
- Onsite selectable output type.(DC current / DC voltage)
- Accuracy class 0.2 ( IEC / EN 60688)
- Seven Segment LCD Display (Optional)
- RS 485(Modbus) Communication (Optional)
- Wide Auxiliary power supply. Accept any input 60V - 300V AC/DC or 24V - 60V AC/DC
- Output Response Time < 400ms
- Fast and easy installation on DIN RAIL or onto a wall or in a panel using optional screw hole bracket
- Connection Terminal : Conventional Screw type

### **Product Features**

### **Measuring Input**

Sine wave or distorted wave form of nominal input voltage with fundamental wave.

#### Analog Output (Single or dual)

Isolated analog output which can be set onsite to either voltage or current output.

#### Accuracy

Output signal accuracy Class 0.2 as per International Standard IEC / EN 60688.

#### Programmable Input/Output

The Transducer can be programmed onsite using front key & display or through programming port (COM) or through RS 485.

#### **LED** Indication

LED indication for power on and output type. (Current output : Red LED, Voltage output : Green LED)

#### **Display Module(Optional)**

Optional 7 segment LCD display with backlit & keypad. For displaying measured parameters & onsite configuration of Input/output

#### **RS 485 Communication(Optional)**

Optional RS485 communication is available. For reading measured parameters & onsite configuration of input/output.



Fig. 1 RISH CON - Hz

#### Symbols and their meaning

- X Input Frequency
- X0 Start value of input
- X1 Elbow value of input
- X2 End value of input
- Y Output DC Voltage / DC Current
- Y0 Start value of output DC Voltage / DC Current
- Y1 Elbow value of output DC Voltage / DC Current
- Y2 End value of output DC Voltage / DC Current
- $R_{N}$  Rated value of output burden
- $U_{N}$  Nominal input voltage



Data Sheet RISH CON-Hz

### **Technical Specifications**

Measuring Input X -

Frequency Transducer (RISH CON - Hz ) Measuring Ranges 45Hz to 55Hz, 48Hz to 52Hz, 55Hz to 65Hz, 45Hz to 65Hz (min span 4Hz) Nominal input Voltage(UN)  $57V \le UN \le 500 V$ Nominal input Voltage burden < 0.6 VA max **Overload Capacity** 1.2 \*UN continuously, 2 \*UN for 1 second, repeated 10 times at 10 minute intervals ( maximum 300V with power supply powered from measuring input). Measuring Output Y( Single or Optional Dual) Output type Load independent DC Voltage, DC Current onsite selectable through DIP switches Load independent DC output 0...20mA / 4...20mA OR 0...10V Output burden with DC current output Signal  $0 \le R \le 15V/Y2$ Output burden with DC voltage output Signal  $Y2/(2 mA) \le R \le \infty$ Current limit under overload R=0 ≤ 1.25 \* Y2 with current output ≤ 100 mA with Voltage output Voltage limit under R=∞ < 1.25 \* Y2 with voltage output ≤ 30 V with current output Residual Ripple in Output signal ≤ 1% pk-pk < 400 ms **Response Time** Measurement TRMS Up to the 15th harmonic **Auxiliary Power Supply** 

AC/DC Auxiliary Supply AC Auxiliary supply frequency range Auxiliary supply consumption 60V... 300 VAC-DC ± 5% or 24V... 60VAC-DC ± 10% 40 to 65 Hz

	≤ 8VA for Single output
60V300 VAC-DC	≤ 10VA for Dual output
	$\leq$ 5 VA for Single output
24V60 VAC-DC	≤ 6 VA for Dual output



**RISH CON-Hz** 

### Accuracy (Acc. to IEC / EN 60688)

Reference Value

**Basic Accuracy** 

Factor C (The highest value applies if calculated C is less than 1,then C=1 applies)

Linear characteristics:	Bent characteristics:	For X1 <u>≤</u> X <u>≤</u> X2:
$C = \frac{1 - \frac{Y0}{Y2}}{1 - \frac{X0}{X2}}$ or C=1	For X0 $\leq$ X $\leq$ X1: C= $\frac{Y1 - Y0}{X1 - X0} \cdot \frac{X2}{Y2}$ or C=1	$C = \frac{1 - \frac{Y1}{Y2}}{1 - \frac{X1}{X2}}$ or C=1

Output end Value Y2 (Voltage or Current)

#### **Reference conditions for Accuracy**

Ambient temperature	23°C +/- 1°C
Pre-conditioning	30 min acc. to IEC / EN 60688
Input Variable	Rated Voltage / Rated Current
Input waveform	Sinusoidal, Form Factor 1.1107
Input signal frequency	50 or 60Hz
Auxiliary supply voltage	At nominal range
Output Load	Rn = 7.5 V / Y2 ± 1% With DC current output signal
	Rn = Y2 / 1 mA ± 1% With DC voltage output signal
Miscellaneous	Acc. to IEC / EN 60688
Additional error	
Temperature influence	±0.2% /10°C
Input signal frequency Auxiliary supply voltage Output Load Miscellaneous Additional error	50 or 60Hz At nominal range Rn = 7.5 V / Y2 ± 1% Rn = Y2 / 1 mA ± 1% Acc. to IEC / EN 60688


0.2\*C

### Influence of Variations


As per IEC / EN 60688 standard Output Stability	< 30 min
---	----------

### **Output Characteristics**


Example of setting with Linear Characteristics :

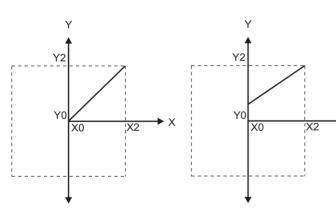

Example of setting with bent Characteristics:

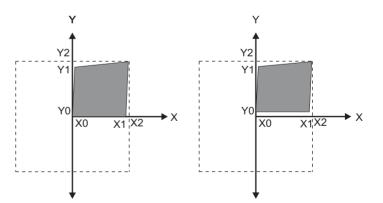

X0 = Start value of input X1 = Elbow value of input X2 = End value of input



- Y1 = Elbow value of output
- Y2 = End value of output

Note: End value(Y2) of output cannot be changed onsite.



Х

		RISH CON-Hz
<b>Safety</b> Protection Class	II (Protection Isolated, EN 61010)	
Protection	IP 40, housing according to EN 60 529 IP 20, terminal according to EN 60 529	
Pollution degree	2	
Installation Category	ш	
Insulation Voltage	1min. (EN 61010-1) 7700V DC, Input versus outer surface 5200V DC, Input versus all other circuits 5200V DC, Auxiliary supply versus outer surface and 690V DC, Output versus output versus each other ve	
Installation Data Mechanical Housing	Lexan 940 (polycarbonate) Flammability Class V-0 acc. to UL 94, self extinguish non dripping, free of halogen	iing,
Mounting position	Rail mounting / wall mounting	
Weight	Approx. 0.4kg	
Connection Terminal Connection Element	Conventional Screw type terminal with indirect wire p	pressure
Permissible cross section of the connection lead	$\leq$ 4.0 mm <sup>2</sup> single wire or 2 x 2.5 mm <sup>2</sup> fine wire	
Environmental Nominal range of use	0 °C <u>23 °C</u> 45 °C (Usage Group II)	
Storage temperature	-40 °C to 70 °C	
Relative humidity of annual mean	≤ 75%	
Altitude	2000m max	
Ambient tests EN 60 068-2-6	Vibration	
Acceleration	± 2 g	
Frequency range	1015010Hz, rate of frequency sweep: 1 octave/r	minute
Number of cycles	10, in each of the three axes	
EN 60 068-2-7	Shock	
Acceleration	3*50g 3 shocks in each direction	
IEC 61000-4-2/-3/-4/-5/-6 EN 55 011	Electromagnetic compatibility	



**Data Sheet** 

### **RISH CON-Hz**


ON LED	Aux.supply healthy condition	Green LED continuous ON		
O/P1 LED	Output1 voltage selection	Green LED continuous ON		
O/FT LED	Output1 Current selection	Red LED continuous ON		
	Output2 voltage selection	Green LED continuous ON		
O/P2 LED	Output2 Current selection	Red LED continuous ON		

### **Electrical Connections**

Connection	Terminal details				
Measuring input	~ ~	5 6			
Auxilliary Power supply	~ , + ~ , -	7 8			
Measuring output - 1	+ -	1 2			
Measuring output - 2	+ -	3 4			

### Input Frequency -) Aux -5 6 7 8 00 O 0 0000 2 3 4 Output-1 $\longrightarrow$ Fig 2. Output-2 (Optional)

### Dimensions

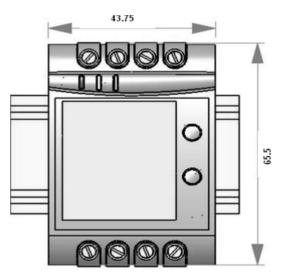

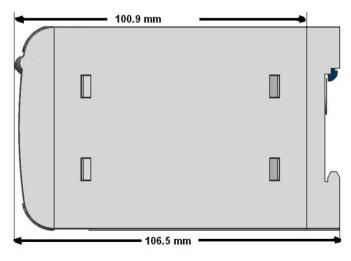


Fig 3.



### **RISH CON-Hz**

### Programming (Figs.4 and 5)

#### Programming of transducer can be done in three ways


- Programming Via Front LCD & two keys for with display model
- Programming Via optional RS485(MODBUS) communication port (Device address, Password, communication parameter, Output Type & simulation mode can be programmed)
- Programming Via Programming port available at front of RISH CON Transducers using (optional) PRKAB601 Adapter.

#### Programming Via Programming port (COM)

A PC with RS 232 C interface along with the programming cable PRKAB601 and the configuration software are required to program the transducer.

#### The connections between

"PC  $\iff$  PRKAB 601  $\iff$  Rish CON Transducer.. The powersupply mustbe applied to Transducer before it can be programmed.

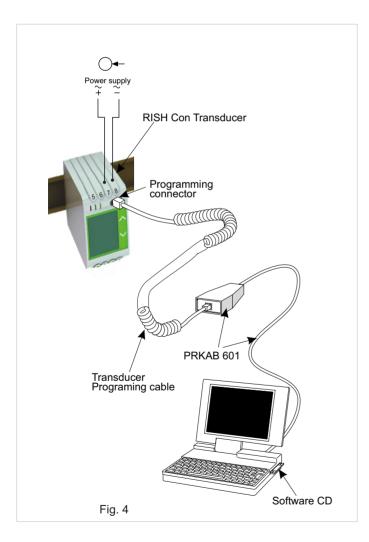

#### The Configuration software is supplied on a CD.

The programming cable PRKAB601 adjusts the signal level and provides the electrical insulation between the PC and RISH CON Transducers.

#### Configuring Rish Con Transducer :

To configure RISH CON Transducer Input / output one of the three programming methods can be adapted along with mechanical switch setting (DIP switch setting on PCB for output).

#### **DIP Switch Setting for OUTPUT :**

Type of output (current or voltage signal) has to be set by DIP switch (see Fig.5).

For programming of DIP switch the user needs to open the transducer housing & set the DIP switch located on PCB to the desired output type Voltage or Current.

Output range changing is not possible with DIP switch setting.

Refer below Fig. 5 for DIP switch setting.

The four pole DIP switch is located on the PCB in the RISH CON Transducer

DIP Switch Setting	Type of Output Signal
ON [] [] [] 1234	load-independent current
ON 1234	load-independent voltage

Fig. 5



### **RISH CON-Hz**

### **Ordering Information**

Product Code	CF41-	Х	XX	Х	Х	Х	Х	Х	00000
	45-55Hz	6							
	55-65Hz	В							
Input Range	45-65Hz	7							
	48-52Hz	А							
Input Voltage	100-500V		8F						
Power Supply	60-300 VAC/DC			Н					
	24-60 VAC/DC			F					
Output	1 O/P				1				
Output	2 O/P				2				
Diaplay Madula	With Display					D			
Display Module	Without Display					Z			
RS485 Module	With RS-485						R		
	Without RS-485						Z		
Dragramming Cable	With - PRKAB 601							С	
Programming Cable	Without - PRKAB 601							Z	

**OrderingExample**-CF41-B8FH1DZZ00000–55-65Hz,100-500V,Aux60-300VAC/DC,Withdisplay,without RS485,Without-PRKAB601

### AnalogDCoutputoptionsasbelow,tobespecifiedwhileorderingonly

Current Output	Voltage Output	DIP Option				
Sta	Standard Ranges					
0/420 mA	010 V Yes					
Optional factory set ranges						
010 mA	05 V	No				
05 mA	02.5 V	No				
02.5 mA	01 V	No				
01 mA						

Note: Endvalueofoutputcannotbechangedonsite.







### **RISHABH INSTRUMENTS LIMITED**

Domestic (India): +91 253 2202099 | marketing@rishabh.co.in International: +91 253 2202004/06/08/99 | global@rishabh.co.in www.rishabh.co.in